


CAD Drawings

Eaves detail

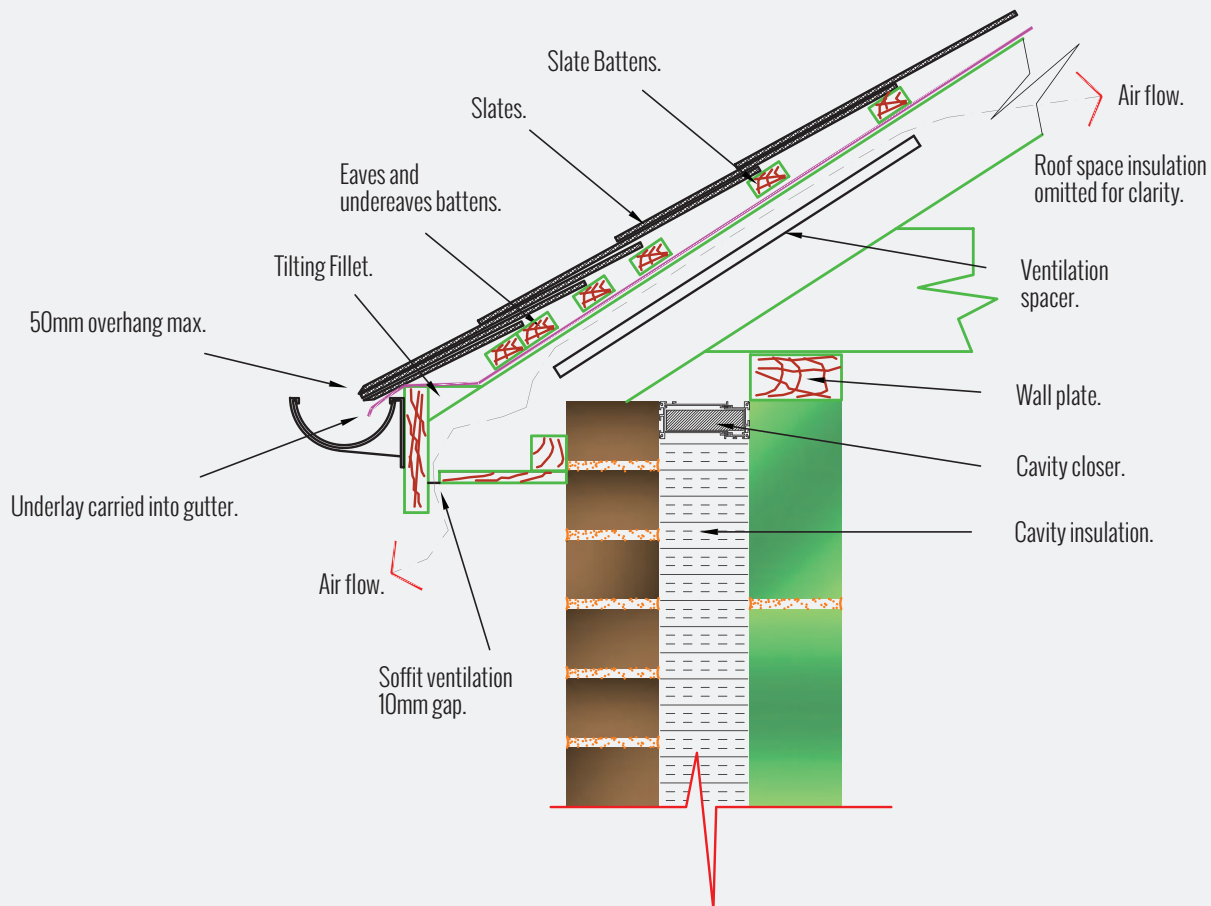

1. Fix the underlay to extend over the tilting fillet and fascia board into the gutter. The underlay should overhang the fascia board by at least 50mm.
2. Fix the first full course batten (eaves batten) so that the tails of the slates in the eaves and the undereaves courses align. Fix the undereaves batten immediately below the eaves batten.
3. Lay the slates forming the undercourse on their backs and head nail them to the undereaves batten.
4. Fix the eaves course with the tails of the slates aligning with the tails of the slates in the undereaves course.