


CAD Drawings

Lead roll ridge

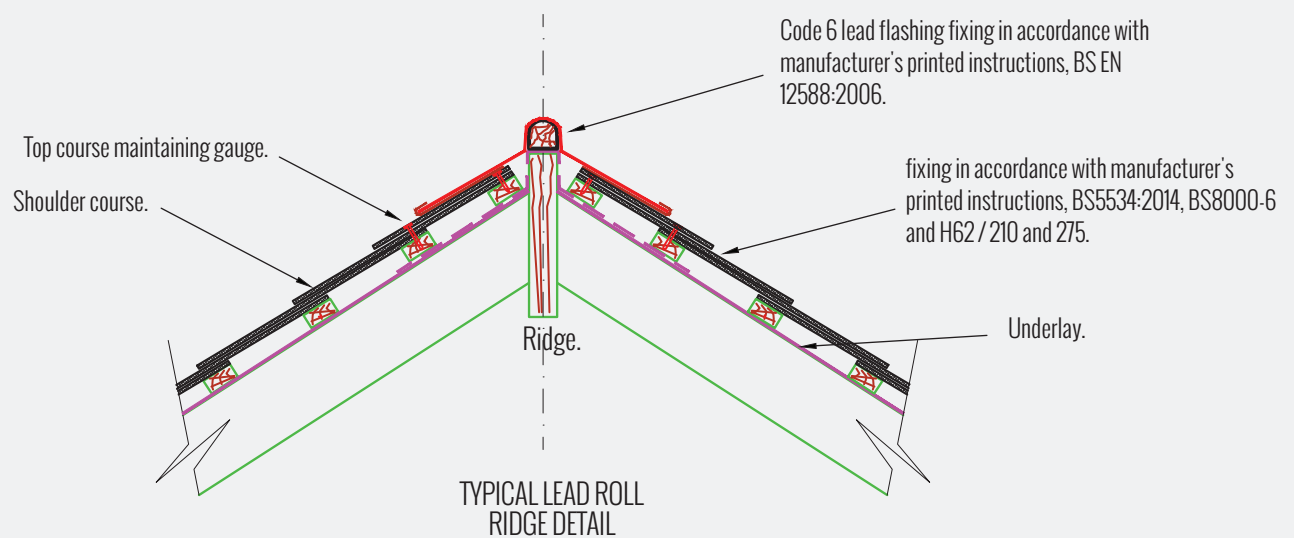

1. Fix underlay over the ridge so that it overlaps the main underlay by at least 150mm. When using ventilated ridges a gap of 50mm should be allowed between the top of the underlay at each pitch.
2. Fix the top course of slates to maintain the gauge.
3. Cover the timber roll with code 6 lead strips 450mm to 500mm wide and 1.5m to 1.8m long. Lap the strips by 75mm at the joints; secure the lead with screws; top sealed with a lead dot under the overlap. Fix 50mm wide copper straps at 300 to 500mm centres.