


CAD Drawings

Verge detail

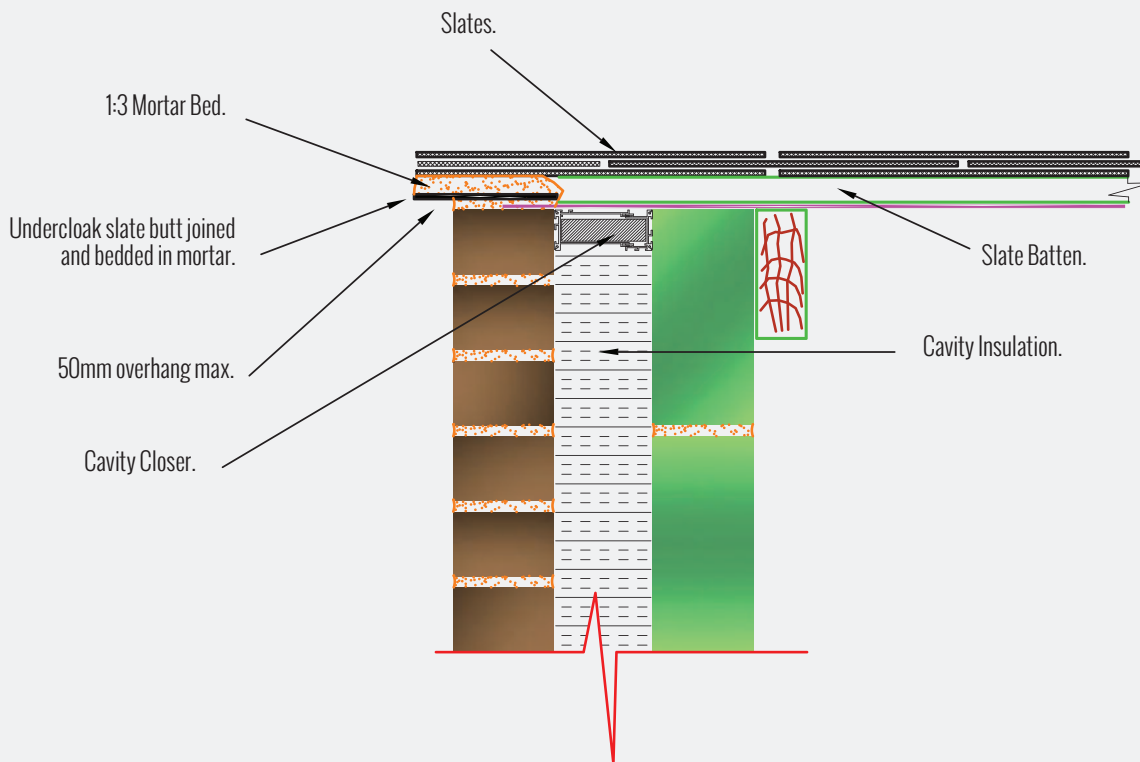

1. Bed the undercloak in mortar so that it extends 50mm maximum from the face of the wall.
2. Fix verge slates flush with the undercloak.
3. Fill the gap between the undercloak and the slates with mortar and strike off smoothly to provide a flush joint and cut back as shown.